

FIG.1

DEC 03 2003
TRADEMAK OFFICE
OIPM

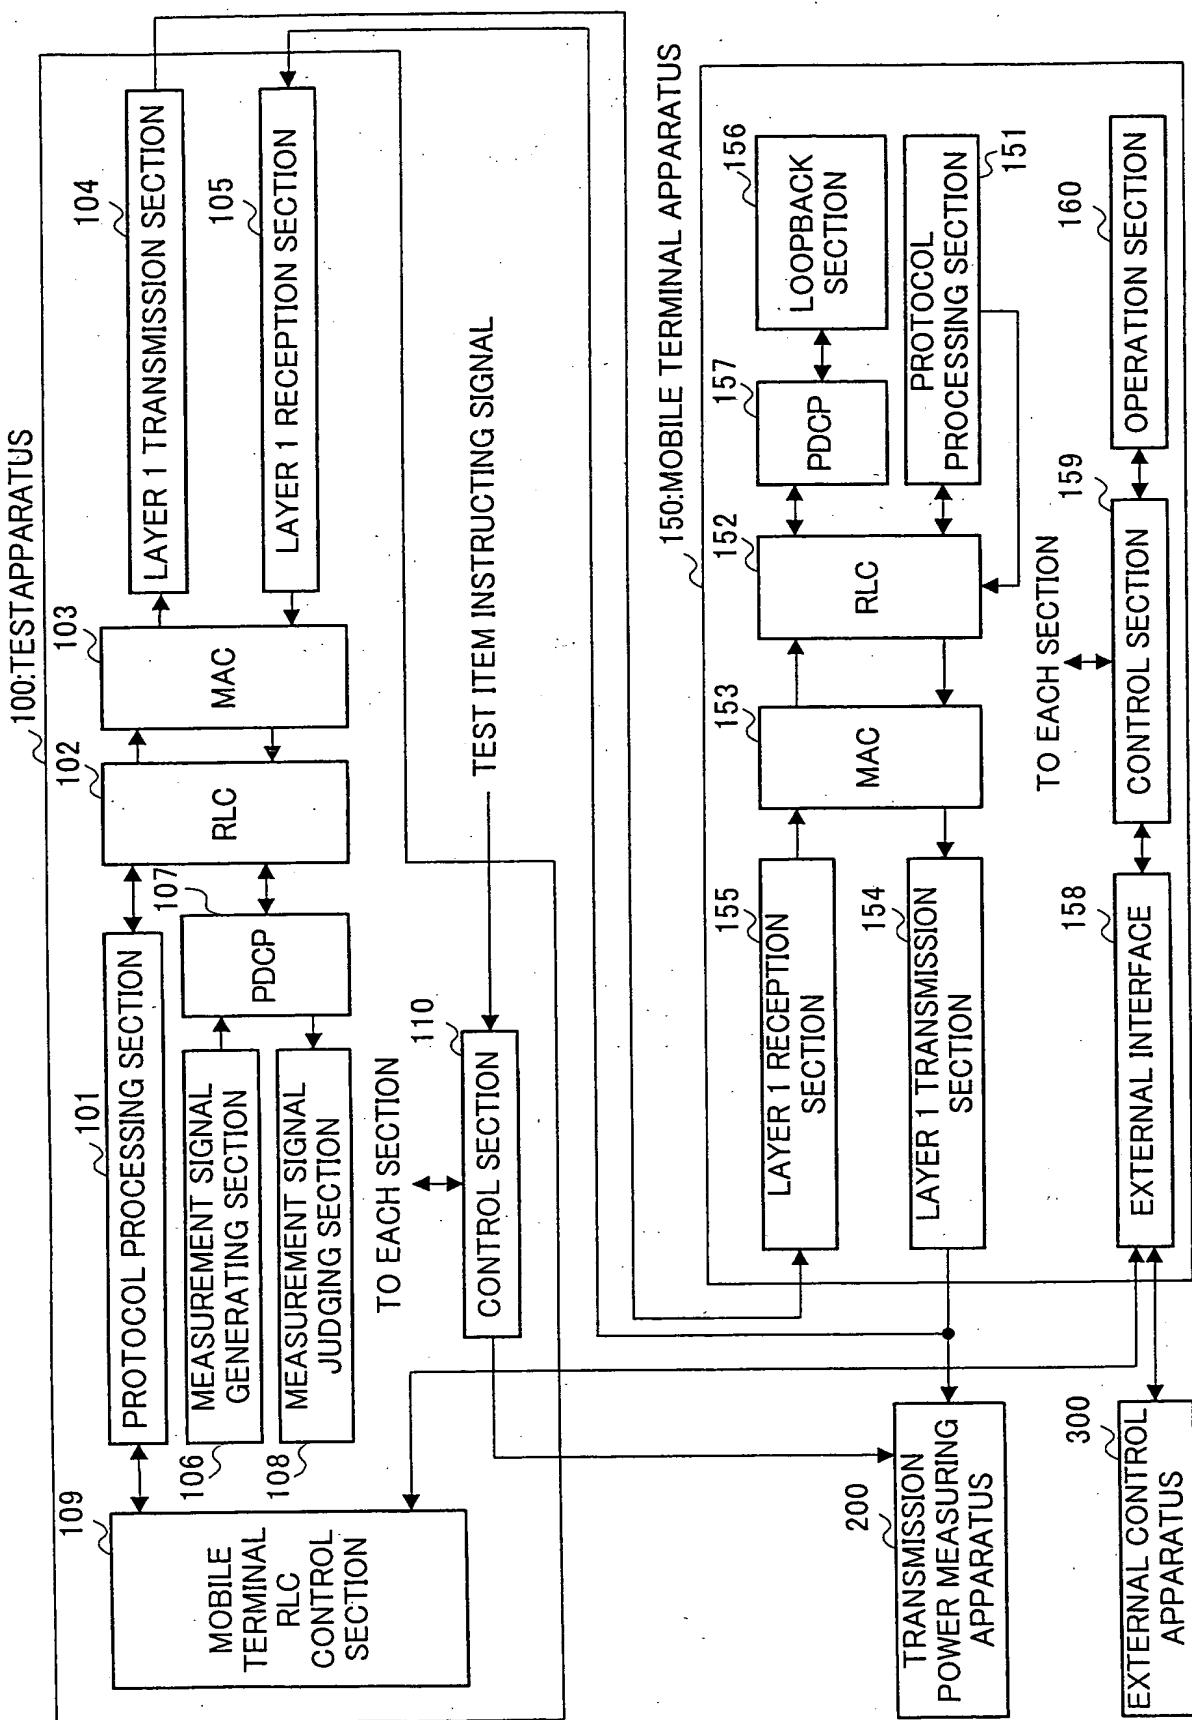


FIG. 2

Step	Direction		Message
	MOBILE TERMINAL	TEST APPARATUS	
0			
1		↔---	PAGING TYPE1(PCCH) RRC CONNECTION REQUEST (CCCH)
2		↔---	RRC CONNECTION SETUP (CCCH)
3		↔---	RRC CONNECTION SETUP COMPLETE (DCCH)
4	→	↔---	PAGING RESPONSE ACTIVATE RB TEST MODE
5	→	↔---	ACTIVATE RB TEST MODE COMPLETE
6	→	↔---	RADIO BEARER SETUP
7	→	↔---	RADIO BEARER SETUP COMPLETE
8		↔---	CLOSE UE TEST LOOP (DCCH)
9		→	CLOSE UE TEST LOOP COMPLETE
10		↔---	UNDER TEST
11		→	OPEN UE TEST LOOP
12		↔---	OPEN UE TEST LOOP COMPLETE
13		→	RRC CONNECTION RELEASE
14		↔---	RRC CONNECTION RELEASE COMPLETE
15		→	

FIG.3